

SDL-CAP Quick Start Guide

The SDL-CAP is an accessory for the X2-SDL that provides extra ingress protection for telemetry units when submerged for extended periods.



Installation

- 1 Apply a generous amount of the included O-ring grease to the two O-rings on the cap. Verify the O-rings are clear of debris prior to the application.




- 2 Using a clean latex glove spread the O-ring grease evenly. Ensure the entire length of each O-ring is thoroughly coated.



SDL-CAP Quick Start Guide

- 3 Align the fully-greased cap with the top bulkhead of the X2-SDL.

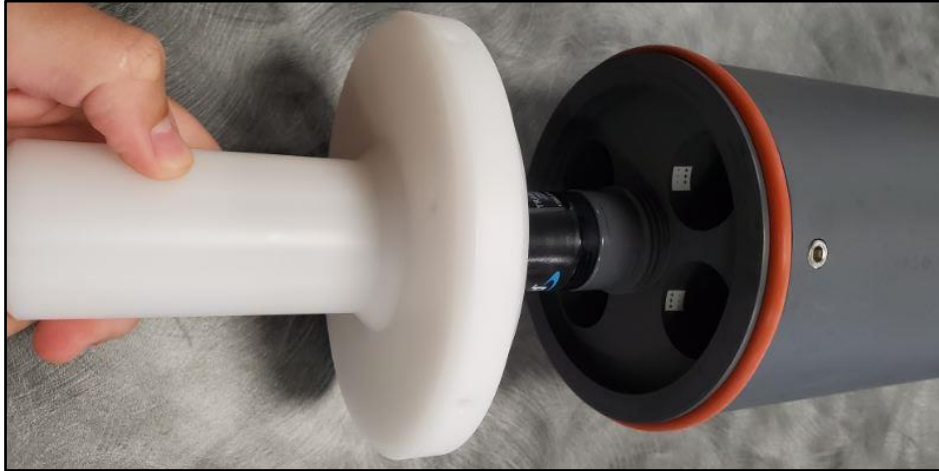

- 4 Turn the cap clockwise to install. Use the 3/16" hex driver included with the X2-SDL logger to fully tighten the cap.

