

RF and UW Bulkhead Installation

The RF bulkhead connector assembly allows 3rd party modems to be integrated inside CB-Series buoy data wells.

Includes:


- 1m pigtail with SMA connector
- N-Style connector integrated on bulkhead
- Requires 1" diameter enclosure hole



Installing RF/UW BULK

Use a 1/8" Allen wrench, or equivalent tool, to release the nut from the threading on one of the empty ports.

Continue to remove by hand and set aside.

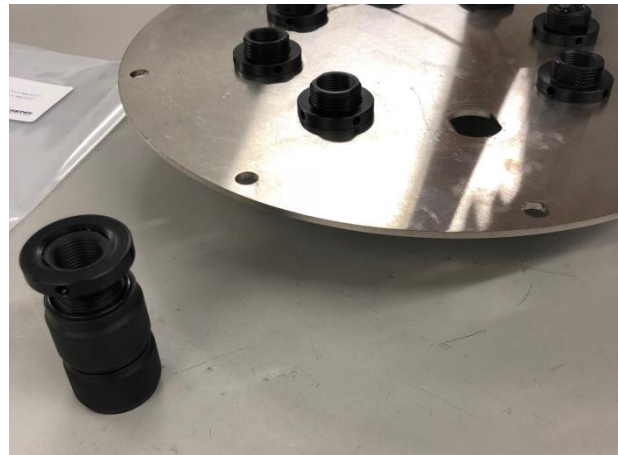

Installing RF/UW BULK

Using the same tool, loosen the nut on the RF-BULK and continue to unscrew by hand.

Note: This is a good time to check for any missing O-rings and replace as needed.



Installing RF/UW BULK

Remove the plug and feed the RF-BULK through the open space.

Tighten the nut first by hand, followed by almost a ¼ turn using the Allen wrench in the first step.

Note: Do not overtighten the nut.



Installing RF/UW BULK

Once installed, the nut may be secured using Marine Goop, or equivalent sealer to prevent the nut from slipping.

