

X2 GROUNDING KIT

INSTRUCTIONS

- 1 Place the large included lock-washer over the larger diameter end of the threaded adapter.
 - a. Tighten the adapter into any of the available (3) threaded holes on the X2 using a 1/2" socket or hex driver.

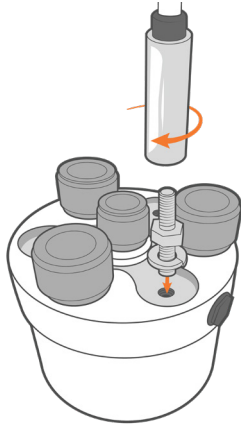


Figure 1: Insert the adapter into one of the threaded holes on the X2.

- 2 Position the grounding lug, followed by the small lock-washer and nut on top of the threaded adapter.
 - a. Tighten down the nut using a 7/16" socket or hex driver.

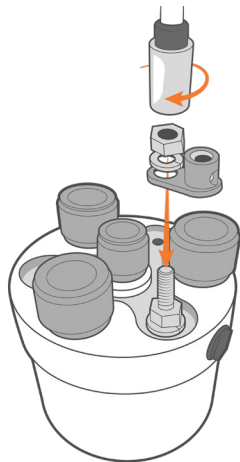


Figure 2: Tighten down the grounding lug.

- 3 Use a 5/32" allen wrench to tighten down the ring terminal cable to the grounding lug.

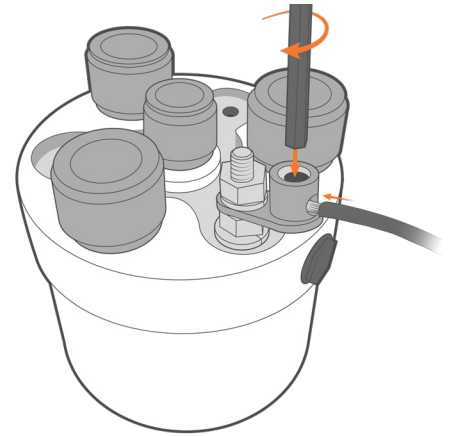


Figure 3: Connection between the grounding lug and terminal cable.

- 4 Follow the PM2 quick start card to mount the X2 to the buried 2" NPT pipe or other mount.
- 5 Slip the ring terminal of the cable between the washer and lock-washer on one side of the PM2 U-bolt.
 - a. Tighten securely with a 1/2" socket or hex driver.

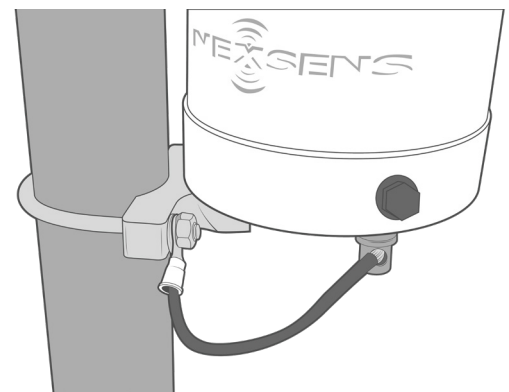


Figure 4: Completed X2 grounding kit assembly.