

CB-CCA Cage Clamp Accessory Quick Start Guide

The CB-CCA cage clamp accessory securely connects an instrument cage to the frame of a CB-Series data buoy system and prevents rotation or loosening of the cage.



Installation

- 1 Place the cage security bracket onto the ends of the cage and frame.




- 2 Run the bolt with pinhole downward through the buoy frame. Place a lock washer and the castle nut onto the bolt. Use a pair of 1-1/8" or adjustable wrenches to tighten the castle nut.



CB-CCA Cage Clamp Accessory Quick Start Guide

- 3 Place the end plates over the center bolt and secure with the three remaining bolts, lock washers and nuts. Tighten each securely.

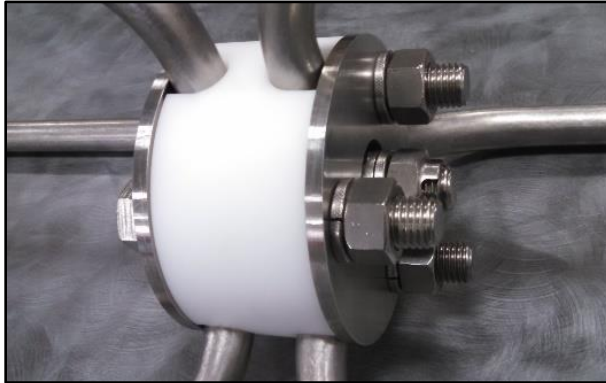

- 4 Run the cotter pin through the hole in the center bolt and bend the long leg around one of the ridges on the castle nut.

